



KRAMER ELECTRONICS LTD.

# USER MANUAL

MODEL:

**VP-311DVI**  
Automatic DVI/Audio Switcher

---

P/N: 2900-000120 Rev 3




## VP-311DVI Quick Start Guide

This guide helps you install and use your product for the first time. For more detailed information, go to [http://www.kramerelectronics.com/support/product\\_downloads.asp](http://www.kramerelectronics.com/support/product_downloads.asp) to download the latest manual or scan the QR code on the left.

### Step 1: Check what's in the box

- ✓ **VP-311DVI** Automatic DVI/Audio Switcher
- ✓ 1 Power supply (12V DC)
- ✓ 4 Rubber feet
- ✓ 1 Quick Start sheet
- ✓ Kramer **RC-IR3** Infrared Remote Control Transmitter with batteries and user manual




Save the original box and packaging materials in case you need to return your **VP-311DVI** for service.

### Step 2: Install the VP-311DVI

Attach the rubber feet and place on a table or mount the **VP-311DVI** in a rack (using an optional **RK-1** rack adapter).

### Step 3: Connect the inputs and outputs

Always switch off the power on each device before connecting it to your **VP-311DVI**.

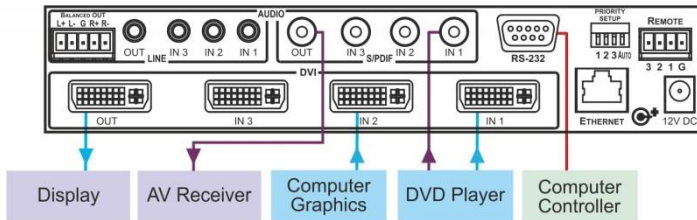

Always use Kramer high-performance cables for connecting AV equipment to the **VP-311DVI**.


### Step 4: Connect the power

Connect the 12V DC power adapter to the **VP-311DVI** and plug the adapter to the mains electricity.



### Step 5: Operate the VP-311DVI

Set the Priority DIP-switches:  
AUTO OFF - manual mode  
AUTO ON - automatic mode  
according to Priority Setup

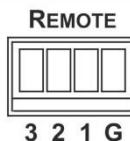

Switch between inputs by connecting the appropriate pin to ground.  
Do not connect more than one pin to ground at the same time.

Operate via front panel buttons, IR remote control, RS-232, remote control contact closure or Ethernet.

# Contents

<b>1</b>	<b>Introduction</b>	<b>1</b>
<b>2</b>	<b>Getting Started</b>	<b>2</b>
2.1	Achieving the Best Performance	2
2.2	Safety Instructions	3
2.3	Recycling Kramer Products	3
<b>3</b>	<b>Overview</b>	<b>4</b>
3.1	Terminology Used in this User Manual	5
3.2	Defining the VP-311DVI Automatic DVI/Audio Switcher	6
<b>4</b>	<b>Connecting the VP-311DVI</b>	<b>7</b>
4.1	Setting the DIP-switches	8
4.2	Connecting the Contact Closure Remote Control Pins	9
4.3	Connecting to the VP-311DVI via RS-232	10
4.4	Controlling via the ETHERNET	11
<b>5</b>	<b>Technical Specifications</b>	<b>15</b>

## Figures

Figure 1:	VP-311DVI Automatic DVI/Audio Switcher	6
Figure 2:	Connecting the VP-311DVI Automatic DVI/Audio Switcher	8
Figure 3:	VP-311DVI DIP-switches	8
Figure 4:	Connecting the Contact Closure Remote Control PINS	10
Figure 5:	Crossed Cable RS-232 Connection	10
Figure 6:	Straight Cable RS-232 Connection with a Null Modem Adapter	11
Figure 7:	Local Area Connection Properties Window	12
Figure 8:	Internet Protocol Version 4 Properties Window	13
Figure 9:	Internet Protocol Version 6 Properties Window	13
Figure 10:	Internet Protocol Properties Window	14

---

# 1 Introduction

Welcome to Kramer Electronics! Since 1981, Kramer Electronics has been providing a world of unique, creative, and affordable solutions to the vast range of problems that confront video, audio, presentation, and broadcasting professionals on a daily basis. In recent years, we have redesigned and upgraded most of our line, making the best even better!

Our 1,000-plus different models now appear in 11 groups that are clearly defined by function: GROUP 1: Distribution Amplifiers; GROUP 2: Switchers and Routers; GROUP 3: Control Systems; GROUP 4: Format/Standards Converters; GROUP 5: Range Extenders and Repeaters; GROUP 6: Specialty AV Products; GROUP 7: Scan Converters and Scalers; GROUP 8: Cables and Connectors; GROUP 9: Room Connectivity; GROUP 10: Accessories and Rack Adapters and GROUP 11: Sierra Products.

Congratulations on purchasing your Kramer **VP-311DVI** *Automatic* DVI/Audio Switcher, which is ideal for the following typical applications:

- Systems requiring automatic DVI routing
- Presentation and multimedia applications

---

## 2 Getting Started

We recommend that you:

- Unpack the equipment carefully and save the original box and packaging materials for possible future shipment
- Review the contents of this user manual



Go to [http://www.kramerelectronics.com/support/product\\_downloads.asp](http://www.kramerelectronics.com/support/product_downloads.asp) to check for up-to-date user manuals, application programs, and to check if firmware upgrades are available (where appropriate).

### 2.1 Achieving the Best Performance

To achieve the best performance:

- Use only good quality connection cables (we recommend Kramer high-performance, high-resolution cables) to avoid interference, deterioration in signal quality due to poor matching, and elevated noise levels (often associated with low quality cables)
- Do not secure the cables in tight bundles or roll the slack into tight coils
- Avoid interference from neighboring electrical appliances that may adversely influence signal quality
- Position your Kramer **VP-311DVI** away from moisture, excessive sunlight and dust



This equipment is to be used only inside a building. It may only be connected to other equipment that is installed inside a building.

## 2.2 Safety Instructions



**Caution:** There are no operator serviceable parts inside the unit

**Warning:** Use only the Kramer Electronics input power wall adapter that is provided with the unit

**Warning:** Disconnect the power and unplug the unit from the wall before installing

## 2.3 Recycling Kramer Products

The Waste Electrical and Electronic Equipment (WEEE) Directive 2002/96/EC aims to reduce the amount of WEEE sent for disposal to landfill or incineration by requiring it to be collected and recycled. To comply with the WEEE Directive, Kramer Electronics has made arrangements with the European Advanced Recycling Network (EARN) and will cover any costs of treatment, recycling and recovery of waste Kramer Electronics branded equipment on arrival at the EARN facility. For details of Kramer's recycling arrangements in your particular country go to our recycling pages at <http://www.kramerelectronics.com/support/recycling/>.

---

## 3 Overview

The **VP-311DVI** is a high-performance switcher for DVI-D video, stereo and S/PDIF audio signals. When configured as a standby switcher, the selected input switches to the next highest priority input if the signal is interrupted.

The **VP-311DVI** features:

- A maximum data rate of 4.95Gbps (1.65 Gbps per graphic channel)
- HDTV compatibility
- HDCP compliance
- HDMI support for HDMI Compressed Audio Channels
- Input/output - DVI-D signals (on DVI-I connectors)
- Standby switching priority set with user-definable DIP-switches

The **VP-311DVI** switches any one of three DVI-D HDCP compliant sources to a single display device, on DVI-I connectors with the corresponding:

- Digital audio (S/PDIF) input signals switched to an S/PDIF output, on RCA connectors **or**
- Unbalanced stereo audio input signals on 3.5mm mini jack connectors switched to an unbalanced stereo audio output on a 3.5mm mini jack connector, as well as to a balanced stereo audio output on a 5-pin terminal block connector

The **VP-311DVI** can operate either in the manual mode or in the auto mode:

- In the manual mode, the **VP-311DVI** acts as a regular switcher, switching the input video and audio signals to the output via the three front panel INPUT SELECT buttons.
- In the auto mode, you can switch any input to the output via the three front panel INPUT SELECT buttons, but once the selected video signal is lost, the machine automatically switches to the highest priority input, according to the input priority setup. The **VP-311DVI** switches back to the primary input when a DVI signal is detected on that input.

The **VP-311DVI** is housed in a desktop-sized enclosure and is 12V DC fed.

Control the **VP-311DVI** using the front panel buttons, or remotely via:

- RS-232 serial commands transmitted by a touch screen system, PC, or other serial controller
- The Kramer infrared remote control transmitter
- The ETHERNET
- Remote control contact closure

### 3.1 Terminology Used in this User Manual

This table defines some terms that are used in this user manual.

Term	Definition
802.3	The standard specification for ETHERNET that is maintained by the Institute of Electrical and Electronics Engineers (IEEE).
Dynamic Host Configuration Protocol (DHCP)	Allows the network administrator to distribute IP addresses from a central point and automatically send a new IP address when an Ethernet point is plugged into a different network location.
Gateway	A network position serving as an entry to another network. On the Internet, a node or stopping point can be either a gateway node or a host (end-point) node.
IP Address	A 32-binary digit number that identifies each sender or receiver (within a network via a particular server or workstation) of data (HTML pages or emails) that is sent in packets across the Internet. Every device connected to an IP network must have a unique IP address. This address is used to reference the specific unit.
Local Area Network (LAN)	Computers sharing a common communications line or wireless link, which often share a server within a defined geographic area.
Media Access Control (MAC) Address	A computer's unique hardware number (or address) in a LAN or other network. On an Ethernet LAN, the (MAC) address is identical to the Ethernet address.
Transmission Control Protocol/Internet Protocol (TCP/IP)	The basic communication language or protocol of the Internet that breaks the message into appropriately sized packets for the network, and can be used as a communications protocol in an intranet or an extranet.

## 3.2 Defining the VP-311DVI Automatic DVI/Audio Switcher

This section defines the **VP-311DVI**.

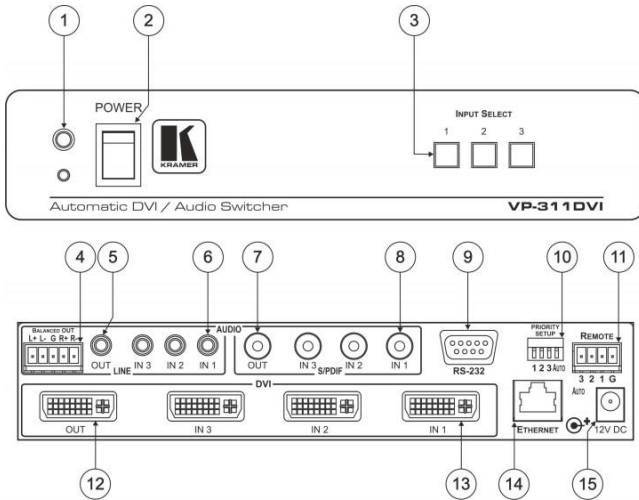


Figure 1: VP-311DVI Automatic DVI/Audio Switcher

#	Feature	Function		
1	IR Receiver	The red LED lights when receiving signals from the Infrared remote control transmitter		
2	POWER Switch	Illuminated switch for turning the unit ON or OFF		
3	INPUT SELECT Buttons	Press the INPUT button (from 1 to 3) to select the input to switch to the output		
4	AUDIO	LINE	BALANCED OUT Terminal Block Connector	Connects the balanced stereo audio output to a balanced stereo audio acceptor
5			OUT 3.5mm Mini Jack	Connect to an unbalanced stereo audio output
6		S/PDIF	IN 3.5mm Mini Jack	Connect to unbalanced stereo audio inputs (from 1 to 3)
7			OUT RCA Connector	Connect to a digital audio (S/PDIF) output
8		IN RCA Connectors	Connect to digital audio (S/PDIF) inputs (from 1 to 3)	
9	RS-232 9-pin D-sub Connector	Connect to the PC or the Remote Controller		
10	PRIORITY SETUP DIP-switches	DIP-switches for setup of the machine: DIPs 1, 2, 3 are for setting the signal priorities, DIP 4 is for setting to the manual or the AUTO mode (see <a href="#">Section 4.1</a> )		
11	REMOTE Terminal Block	Connects to a dry contact switch (see <a href="#">Section 4.2</a> )		
12	OUT DVI-I Connector	Connect to the DVI acceptor		
13	IN DVI-I Connectors	Connect to the DVI sources (from 1 to 3)		
14	ETHERNET Connector	Connect to the PC or other Serial Controller through computer networking		
15	12V DC	+12V DC connector for powering the unit		

---

## 4 Connecting the VP-311DVI



Always switch off the power to each device before connecting it to your **VP-311DVI**. After connecting your **VP-311DVI**, connect its power and then switch on the power to each device.

To connect the **VP-311DVI** as illustrated in the example in [Figure 2](#):

1. Connect a DVI source (for example, an HDCP-compliant DVD) to the IN 1 DVI connector and connect the digital audio input to the IN 1 S/PDIF RCA connector.  
You can also connect a DVD player with an HDMI (High Definition Multimedia Interface) connector, using an HDMI-DVI adapter to transfer video signals.
2. Connect a DVI source (for example, a DVI computer graphics source) to the IN 3 DVI connector and connect the digital audio input to the IN 3 3.5 mini-jack connector.  
Alternatively you can connect it to the 3.5mm mini jack connector.
3. Connect the OUT DVI connector to the DVI acceptor (for example, a DVI/HDMI plasma display).
4. Connect the AUDIO OUT S/PDIF RCA connector and the AUDIO OUT 3.5 mini-jack connector to a digital audio acceptor (for example, an AV receiver).  
If the inputs are connected only to the 3.5mm mini jack connectors, connect the AUDIO OUT 3.5mm mini jack connector and/or the BALANCED OUT terminal block connector only.
5. Set the PRIORITY SETUP DIP-switches (see [Section 4.1](#))
6. If required, connect a PC and/or controller to the RS-232 port (see [Section 4.3](#)) and/or the ETHERNET port (see Section 4.4).
7. If required, connect the contact closure remote control PINS (see Section 4.2).  
The connection is not illustrated in [Figure 2](#).
8. Connect the 12V DC power adapter to the power socket and connect the adapter to the mains electricity.

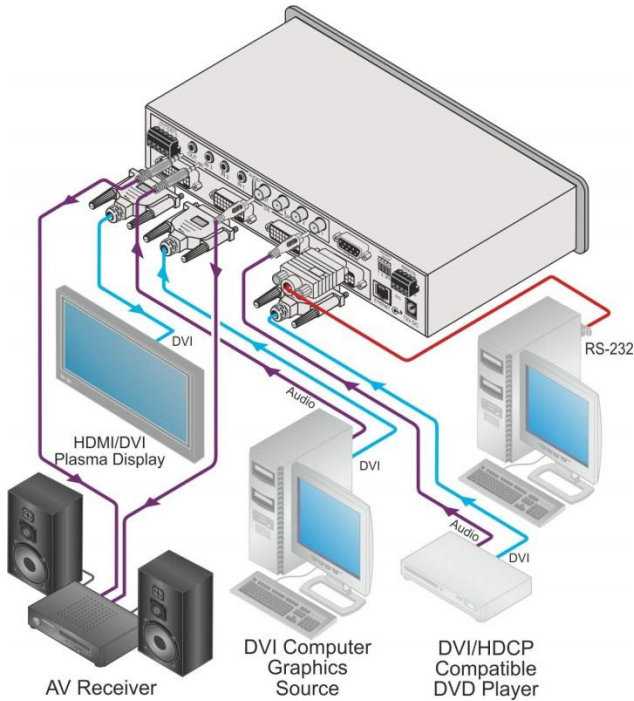


Figure 2: Connecting the VP-311DVI Automatic DVI/Audio Switcher

## 4.1 Setting the DIP-switches

This section describes the machine set-up and DIP-switch selection. By default, all the **VP-311DVI** DIP-switches are set to OFF. [Figure 3](#) describes the **VP-311DVI** unit DIP-switches.



Figure 3: VP-311DVI DIP-switches

DIP	Function	Description
1, 2, 3	Priority setup	Set the inputs priority
4	AUTO	OFF: manual mode, switch between channels manually; ON: automatic mode, inputs switch automatically to the output according to the priority setup

Inputs 1, 2 and 3 can be set in priority according to your needs. The **VP-311DVI** switches to the secondary input upon loss of the primary input signal, and back to the primary input when a signal is detected. The following table describes the priority setup:

Priority	DIP Position		
1, 2, 3	OFF	OFF	OFF
	ON	ON	ON
3, 2, 1	OFF	OFF	ON
	OFF	ON	ON
2, 3, 1	OFF	ON	OFF
1, 3, 2	ON	OFF	OFF
3, 1, 2	ON	OFF	ON
2, 1, 3	ON	ON	OFF

### 4.1.1 Priority Switching Applications

In the following example, DIP-switches 1, 2, and 3 are set to OFF, OFF and OFF respectively, meaning that the highest priority input is IN 1; IN 2 is the secondary input; and IN 3 the third. DIP-switch 4 is set ON, enabling AUTO mode operation.

If all the inputs are connected, you can, for example, press the INPUT SELECTOR 2 button to switch IN 2 to OUT. The plasma display shows the IN 2 signal.

If the DVI signal on IN 2 is cut off, the switcher automatically switches IN 1 to the output, and if that fails too, IN 3 is automatically switched to the output. If, in the meantime, the IN 2 signal is restored, IN 2 takes priority once again.

## 4.2 Connecting the Contact Closure Remote Control Pins

The contact closure remote control pins operate in a similar way to the input buttons.

For example, you may override (equivalent to pressing a different input button) the presently routed input by using the remote control contact closure. To do so, connect the appropriate input number pin on the REMOTE terminal block connector to the G (Ground) pin, as [Figure 4](#) illustrates.


When in the manual mode (DIP-switch 4 set to OFF), you can switch an input to the output using the front panel INPUT SELECT buttons.

Note that unless the connection is permanent, the VP-311DVI reverts to an automatic switcher when the connection is removed.




**DO NOT** Connect more than one PIN to the Ground PIN at the same time

To route IN 1 to the output, temporarily attach PIN 1 to PIN G (Ground)

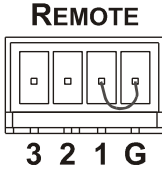

To route IN 2 to the output, temporarily attach PIN 2 to PIN G (Ground)

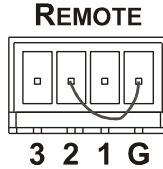

To route IN 3 to the output, temporarily attach PIN 3 to PIN G (Ground)

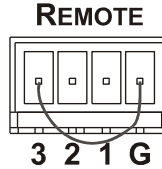


Figure 4: Connecting the Contact Closure Remote Control PINS

### 4.3 Connecting to the VP-311DVI via RS-232

You can connect to the unit via a crossed RS-232 connection, using for example, a PC. A crossed cable or null-modem is required as shown in method A and B respectively. If a shielded cable is used, connect the shield to pin 5.

**Method A** (Figure 5)—Connect the RS-232 9-pin D-sub port on the unit via a crossed cable (only pin 2 to pin 3, pin 3 to pin 2, and pin 5 to pin 5 need be connected) to the RS-232 9-pin D-sub port on the PC.

**Note:** There is no need to connect any other pins.

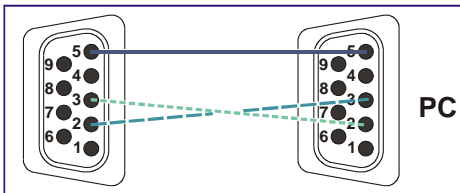


Figure 5: Crossed Cable RS-232 Connection

Hardware flow control is not required for this unit. In the rare case where a controller requires hardware flow control, short pin 1 to 7 and 8, and pin 4 to 6 on the controller side.

**Method B** (Figure 6)—Connect the RS-232 9-pin D-sub port on the unit via a straight (flat) cable to the null-modem adapter, and connect the null-modem

adapter to the RS-232 9-pin D-sub port on the PC. The straight cable usually contains all nine wires for a full connection of the D-sub connector. Because the null-modem adapter (which already includes the flow control jumpering described in Method A above) only requires pins 2, 3 and 5 to be connected, you are free to decide whether to connect only these 3 pins or all 9 pins.

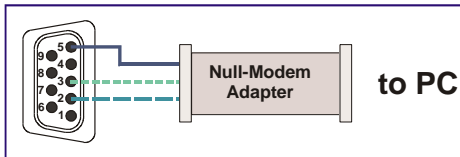


Figure 6: Straight Cable RS-232 Connection with a Null Modem Adapter

## 4.4 Controlling via the ETHERNET

You can connect to the **product** via Ethernet using either of the following methods:

- Directly to the PC using a crossover cable (see [Section 4.4.1](#))
- Via a network hub, switch, or router, using a straight-through cable (see [Section 4.4.2](#))

**Note:** If you want to connect via a router and your IT system is based on IPv6, speak to your IT department for specific installation instructions.

### 4.4.1 Connecting the Ethernet Port Directly to a PC

You can connect the Ethernet port of the **VP-311DVI** directly to the Ethernet port on your PC using a crossover cable with RJ-45 connectors.



This type of connection is recommended for identifying the **VP-311DVI** with the factory configured default IP address.

After connecting the **VP-311DVI** to the Ethernet port, configure your PC as follows:

1. Click **Start > Control Panel > Network and Sharing Center**.
2. Click **Change Adapter Settings**.

3. Highlight the network adapter you want to use to connect to the device and click **Change settings of this connection**.

The Local Area Connection Properties window for the selected network adapter appears as shown in [Figure 7](#).

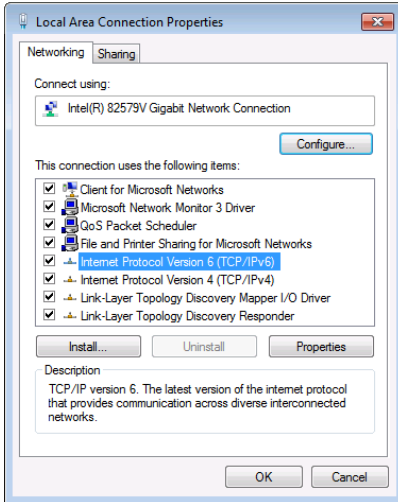


Figure 7: Local Area Connection Properties Window

4. Highlight either **Internet Protocol Version 6 (TCP/IPv6)** or **Internet Protocol Version 4 (TCP/IPv4)** depending on the requirements of your IT system.

5. Click **Properties**.

The Internet Protocol Properties window relevant to your IT system appears as shown in [Figure 8](#) or [Figure 9](#).

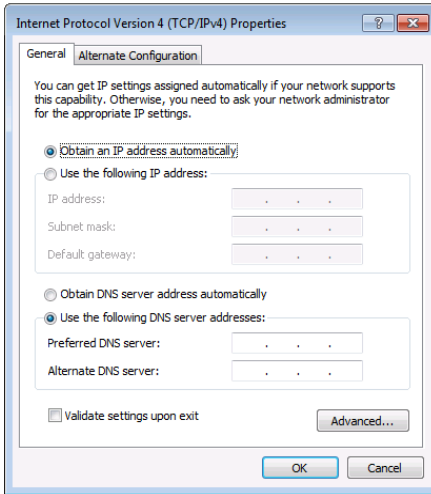


Figure 8: Internet Protocol Version 4 Properties Window

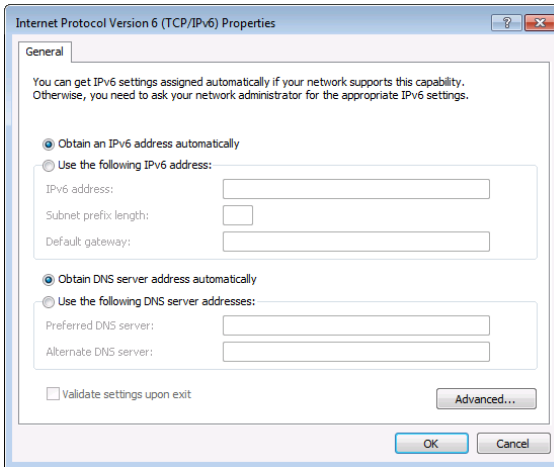


Figure 9: Internet Protocol Version 6 Properties Window

6. Select **Use the following IP Address** for static IP addressing and fill in the details as shown in [Figure 10](#).

For TCP/IPv4 you can use any IP address in the range 192.168.1.1 to 192.168.1.255 (excluding 192.168.1.39) that is provided by your IT department.

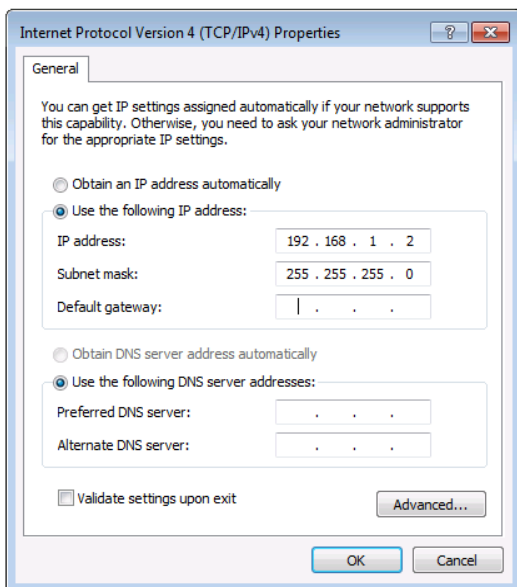


Figure 10: Internet Protocol Properties Window

7. Click **OK**.
8. Click **Close**.

#### 4.4.2 Connecting the Ethernet Port via a Network Hub or Switch

You can connect the Ethernet port of the **VP-311DVI** to the Ethernet port on a network hub or using a straight-through cable with RJ-45 connectors.

#### 4.4.3 Control Configuration via the Ethernet Port

To control several units via Ethernet, connect the Master unit (Device 1) via the Ethernet port to the Ethernet port of your PC. Use your PC provide initial configuration of the settings (see [Section 4.4](#)).

## 5 Technical Specifications

INPUTS:	3 DVI-D on a DVI-I connector, 1.2Vpp, DDC signal 5Vpp (TTL), 3 S/PDIF digital audio on RCA connectors, 3 unbalanced stereo audio, +4dBm on 3.5mm mini jacks
OUTPUT:	1 DVI-D on a DVI-I connector, 1.2Vpp, DDC signal 5Vpp (TTL), 1 S/PDIF digital audio on an RCA connector, 1 unbalanced stereo audio, +4dBm on a 3.5mm mini jack, with 1 balanced stereo audio on a 5-pin detachable terminal block
DATA RATE:	Up to 1.65Gbps
CONTROLS:	Front panel buttons, infrared remote control transmitter, RS-232, Ethernet
POWER CONSUMPTION:	12V DC, 390mA
OPERATING TEMPERATURE:	0° to +40°C (32° to 104°F)
STORAGE TEMPERATURE:	-40° to +70°C (-40° to 158°F)
HUMIDITY:	10% to 90%, RHL non-condensing
DIMENSIONS:	21.6cm x 16.1cm x 4.4cm (8.5" x 6.3" x 1.7", W, D, H)
WEIGHT:	1.2kg (2.6lbs) approx.
ACCESSORIES:	Power supply, DVI male to male cable, IR remote control transmitter, null-modem adapter, Windows®-based Configuration Manager (Ethernet Configuration and Virtual Serial Port) CD
OPTIONS:	RK-1 19" rack adapter
Specifications are subject to change without notice at <a href="http://www.kramerelectronics.com">http://www.kramerelectronics.com</a>	

## LIMITED WARRANTY

The warranty obligations of Kramer Electronics for this product are limited to the terms set forth below.

### What is Covered

This limited warranty covers defects in materials and workmanship in this product.

### What is Not Covered

This limited warranty does not cover any damage, deterioration or malfunction resulting from any alteration, modification, improper or unreasonable use or maintenance, misuse, abuse, accident, neglect, exposure to excess moisture, fire, improper packing and shipping (such claims must be presented to the carrier), lightning, power surges, or other acts of nature. This limited warranty does not cover any damage, deterioration or malfunction resulting from the installation or removal of this product from any installation, any unauthorized tampering with this product, any repairs attempted by anyone unauthorized by Kramer Electronics to make such repairs, or any other cause which does not relate directly to a defect in materials and/or workmanship of this product. This limited warranty does not cover cartons, equipment enclosures, cables or accessories used in conjunction with this product.

Without limiting any other exclusion herein, Kramer Electronics does not warrant that the product covered hereby, including, without limitation, the technology and/or integrated circuit(s) included in the product, will not become obsolete or that such items are or will remain compatible with any other product or technology with which the product may be used.

### How Long Does this Coverage Last

Seven years as of this printing; please check our Web site for the most current and accurate warranty information.

### Who is Covered

Only the original purchaser of this product is covered under this limited warranty. This limited warranty is not transferable to subsequent purchasers or owners of this product.

### What Kramer Electronics will do

Kramer Electronics will, at its sole option, provide one of the following three remedies to whatever extent it shall deem necessary to satisfy a proper claim under this limited warranty:

1. Elect to repair or facilitate the repair of any defective parts within a reasonable period of time, free of any charge for the necessary parts and labor to complete the repair and restore this product to its proper operating condition. Kramer Electronics will also pay the shipping costs necessary to return this product once the repair is complete.
2. Replace this product with a direct replacement or with a similar product deemed by Kramer Electronics to perform substantially the same function as the original product.
3. Issue a refund of the original purchase price less depreciation to be determined based on the age of the product at the time remedy is sought under this limited warranty.

### What Kramer Electronics will not do Under This Limited Warranty

If this product is returned to Kramer Electronics or the authorized dealer from which it was purchased or any other party authorized to repair Kramer Electronics products, this product must be insured during shipment, with the insurance and shipping charges prepaid by you. If this product is returned uninsured, you assume all risks of loss or damage during shipment. Kramer Electronics will not be responsible for any costs related to the removal or re-installation of this product from or into any installation. Kramer Electronics will not be responsible for any costs related to any setting up this product, any adjustment of user controls or any programming required for a specific installation of this product.

### How to Obtain a Remedy under this Limited Warranty

To obtain a remedy under this limited warranty, you must contact either the authorized Kramer Electronics reseller from whom you purchased this product or the Kramer Electronics office nearest you. For a list of authorized Kramer Electronics resellers and/or Kramer Electronics authorized service providers, please visit our web site at [www.kramerelectronics.com](http://www.kramerelectronics.com) or contact the Kramer Electronics office nearest you.

In order to pursue any remedy under this limited warranty, you must possess an original, dated receipt as proof of purchase from an authorized Kramer Electronics reseller. If this product is returned under this limited warranty, a return authorization number, obtained from Kramer Electronics, will be required. You may also be directed to an authorized reseller or a person authorized by Kramer Electronics to repair the product.

If it is decided that this product should be returned directly to Kramer Electronics, this product should be properly packed, preferably in the original carton, for shipping. Cartons not bearing a return authorization number will be refused.

### Limitation on Liability

THE MAXIMUM LIABILITY OF KRAMER ELECTRONICS UNDER THIS LIMITED WARRANTY SHALL NOT EXCEED THE ACTUAL PURCHASE PRICE PAID FOR THE PRODUCT. TO THE MAXIMUM EXTENT PERMITTED BY LAW, KRAMER ELECTRONICS IS NOT RESPONSIBLE FOR DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR CONDITION, OR UNDER ANY OTHER LEGAL THEORY. Some countries, districts or states do not allow the exclusion or limitation of relief, special, incidental, consequential or indirect damages, or the limitation of liability to specified amounts, so the above limitations or exclusions may not apply to you.

### Exclusive Remedy

TO THE MAXIMUM EXTENT PERMITTED BY LAW, THIS LIMITED WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL OR WRITTEN, EXPRESS OR IMPLIED. TO THE MAXIMUM EXTENT PERMITTED BY LAW, KRAMER ELECTRONICS SPECIFICALLY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IF KRAMER ELECTRONICS CANNOT LAWFULLY DISCLAIM OR EXCLUDE IMPLIED WARRANTIES UNDER APPLICABLE LAW, THEN ALL IMPLIED WARRANTIES COVERING THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY TO THIS PRODUCT AS PROVIDED UNDER APPLICABLE LAW.

IF ANY PRODUCT TO WHICH THIS LIMITED WARRANTY APPLIES IS A "CONSUMER PRODUCT" UNDER THE MAGNUSON-MOSS WARRANTY ACT (15 U.S.C.A. §2301, ET SEQ.) OR OTHER APPLICABLE LAW, THE FOREGOING DISCLAIMER OF IMPLIED WARRANTIES SHALL NOT APPLY TO YOU, AND ALL IMPLIED WARRANTIES ON THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR THE PARTICULAR PURPOSE, SHALL APPLY AS PROVIDED UNDER APPLICABLE LAW.

### Other Conditions

This limited warranty gives you specific legal rights, and you may have other rights which vary from country to country or state to state.

This limited warranty is void if (i) the label bearing the serial number of this product has been removed or defaced, (ii) the product is not distributed by Kramer Electronics or (iii) this product is not purchased from an authorized Kramer Electronics reseller. If you are unsure whether a reseller is an authorized Kramer Electronics reseller, please visit our Web site at [www.kramerelectronics.com](http://www.kramerelectronics.com) or contact a Kramer Electronics office from the list at the end of this document.

Your rights under this limited warranty are not diminished if you do not complete and return the product registration form or complete and submit the online product registration form. Kramer Electronics thanks you for purchasing a Kramer Electronics product. We hope it will give you years of satisfaction.



For the latest information on our products and a list of Kramer distributors, visit our Web site where updates to this user manual may be found.

**We welcome your questions, comments, and feedback.**

Web site: [www.kramerelectronics.com](http://www.kramerelectronics.com)

E-mail: [info@kramerel.com](mailto:info@kramerel.com)



**SAFETY WARNING**

Disconnect the unit from the power supply before opening and servicing



P/N: 2900-000120



Rev: 3